

# Idle Control Bus Function

An Idle Timer Starts when the following equation is true:

(Neutral Hi **OR** Neutral Lo) **AND NOT**(Lift Deployed)

The Idle Timer is Preset with 4 DIP Switches.

An Alarm/Horn is turned on when the Idle Timer expires.

This system is reset when the ignition key is turned off.

NOTE: It is assumed that Lift Deployed is Ground.

---

The picture below illustrates the user interface of an optional Laptop Programmable Idle Controller. This unit does not incorporate any DIP Switches, and provides more functional options.

